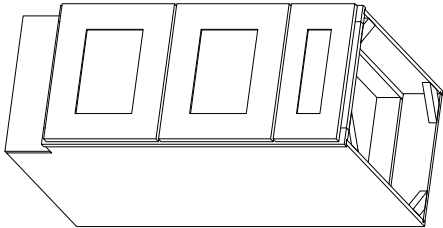









3DB12,3DB15,3DB18,3DB21,3DB24,3DB30,3DB36  
3VDB12,3VDB15,3VDB18,3VDB21,3VDB24  
ASSEMBLY INSTRUCTIONS

- STEP 1: Joint side panel with back panel  
STEP 2: Joint bottom panel with side panel  
STEP 3: Joint side panel with bottom & back panel  
STEP 4: Attach frame on and toekick board  
STEP 5: Joint the drawer together, then install the drawer guide.  
STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf  
STEP 7: Fix drawer head on the drawer front and adjust the cover-space



PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	6
G	DRAWER BOX SIDE	6
H	DRAWER BOX BOTTOM	3
I	DRAWER HEAD	3

NO.	Description	QTY	PICTURE
8	BUMPER	12	
7	1" ROUND HEAD SCREW	12	
6	2" SELF-CLOSE SLIDE	3	
5	9/16" ROUND HEAD SCREW	40	
4	CLEAT	10	
3	1" FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	