



Solid Surface Corner Shelf CS99SS

Installation Instructions


TOOLS REQUIRED

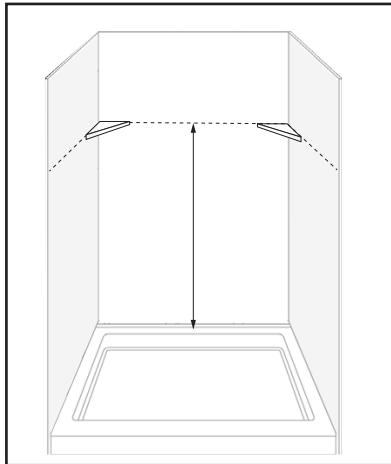


1. Can be installed left or right. Determine the mounting height of shelf.

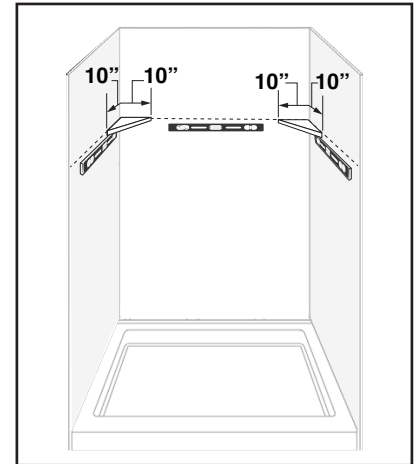


2. Using a level, mark 10" x 10" on each wall at determined height.

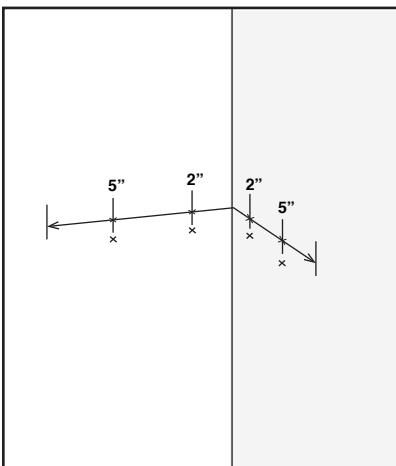


3. Studs should be marked at 2" & 5" from inside corner.

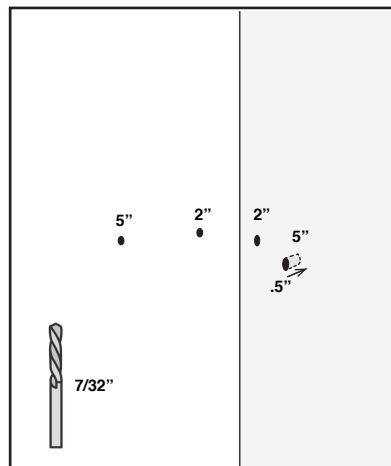


4. Drill small pilot hole, then using 7/32" bit, drill hole approximately 1/2" into wall.

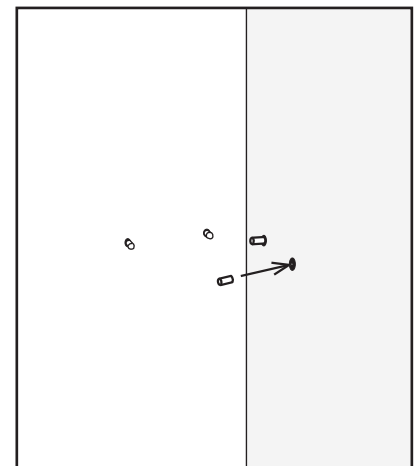


5. Fill holes with silicone and push studs into holes

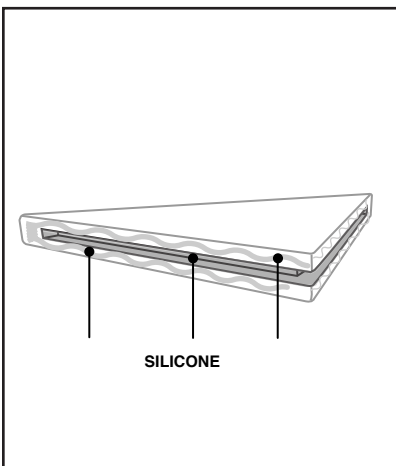

6. Apply generous silicone to back of shelf on flat edges and into grooved area.

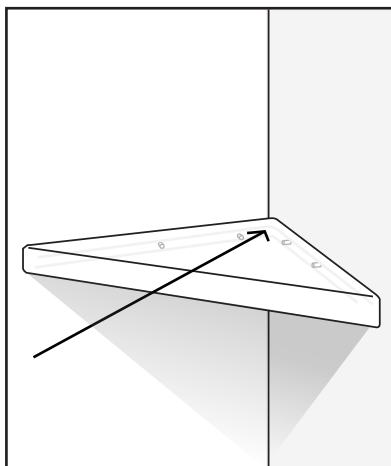

7. Install corner shelf over studs making sure shelf is level.

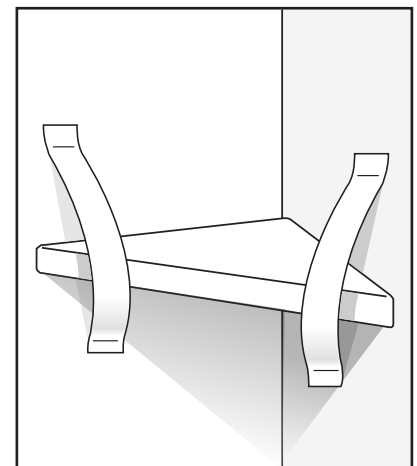

8. Secure shelf with tape for 60 minutes.