


"Creations" by ALNO, INC.

P.O. Box 3249, 9725 Owensmouth Avenue, Chatsworth, CA 91311 • 818-882-6028 • FAX 818-700-1540

INSTALLATION INSTRUCTIONS

- Model: MC4912 - 18" Beveled Edge Mirror (WH)
MC4952 - 18" Tapered Beveled Edge Mirror (SS)
MC4910 - 24" Beveled Edge Mirror (WH)
MC4950 - 24" Tapered Beveled Edge Mirror (SS)

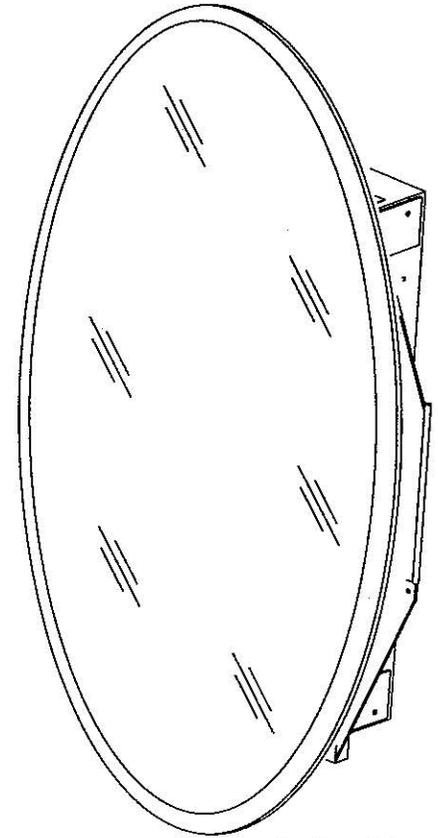

Surface Mount
Shown

Recessed or Surface Mounted Oval Bath Cabinet

Size	WALL OPENING			OVERALL SIZE	
	W	H	D	W	H
18"	14 1/4	18	4	21 1/4	31 1/4
24"	14 1/4	24	4	24	35 7/8

This Medicine Cabinet was designed to be either Recessed or Surface Mounted. Please decide which version you would like to use and install according to that style.

Note:

Carefully remove all packing material from the carton. Place Door, Glass Shelves, and Side Mirrors in a safe area to prevent any accidents.

PLEASE: Read the instructions before beginning the installation process.

List of Required Tools:

1. Safety Glasses
2. Measuring Tape
3. Pencil
4. Level
5. Screwdriver (Phillips head)
6. Wrench (11/32" or 9mm)
7. Wall Stud Locator